

HYDRO
QUALITY GARAGE DOORS

DiGi
QUALITY ACCESS TECHNOLOGY



digidoor **GARAGE
DOOR OPENER**
Installation Instructions and User Guide


1. Features

- Microprocessor-based control system
- One button to open, close and stop
- Bright LED courtesy light, with a 3-minute time-out
- Easily adjustable operating force/obstacle sensing
- Supports safety beams
- Optional back-up battery
- Auto-close feature
- 24V DC motor provides superior power-to-weight ratio, ensuring quiet, smooth operation with soft starting and stopping
- Protected against overload and overheating
- Reliable chain-drive
- Sturdy steel rail
- LED display – simplifies function programming
- Security – is ensured by the use of code-hopping technology
- Manual override – a simple release allows the door to be operated by hand
- Options – safety beams, back-up battery, wall button and auto-close

2. Technical Specifications

Power Input	220VAC +10% 50~60Hz	Receiver Frequency	433.92MHz
Motor	24VDC	Decoding	Rolling code
Working Temp	>-20°C, <+50°C	Courtesy Lamp	LED
Relative Humidity	< = 90%	Courtesy Lamp Time	3 minutes
Operating Force	1000N	Fuse	2.5A 250V

3. Contents of the Box

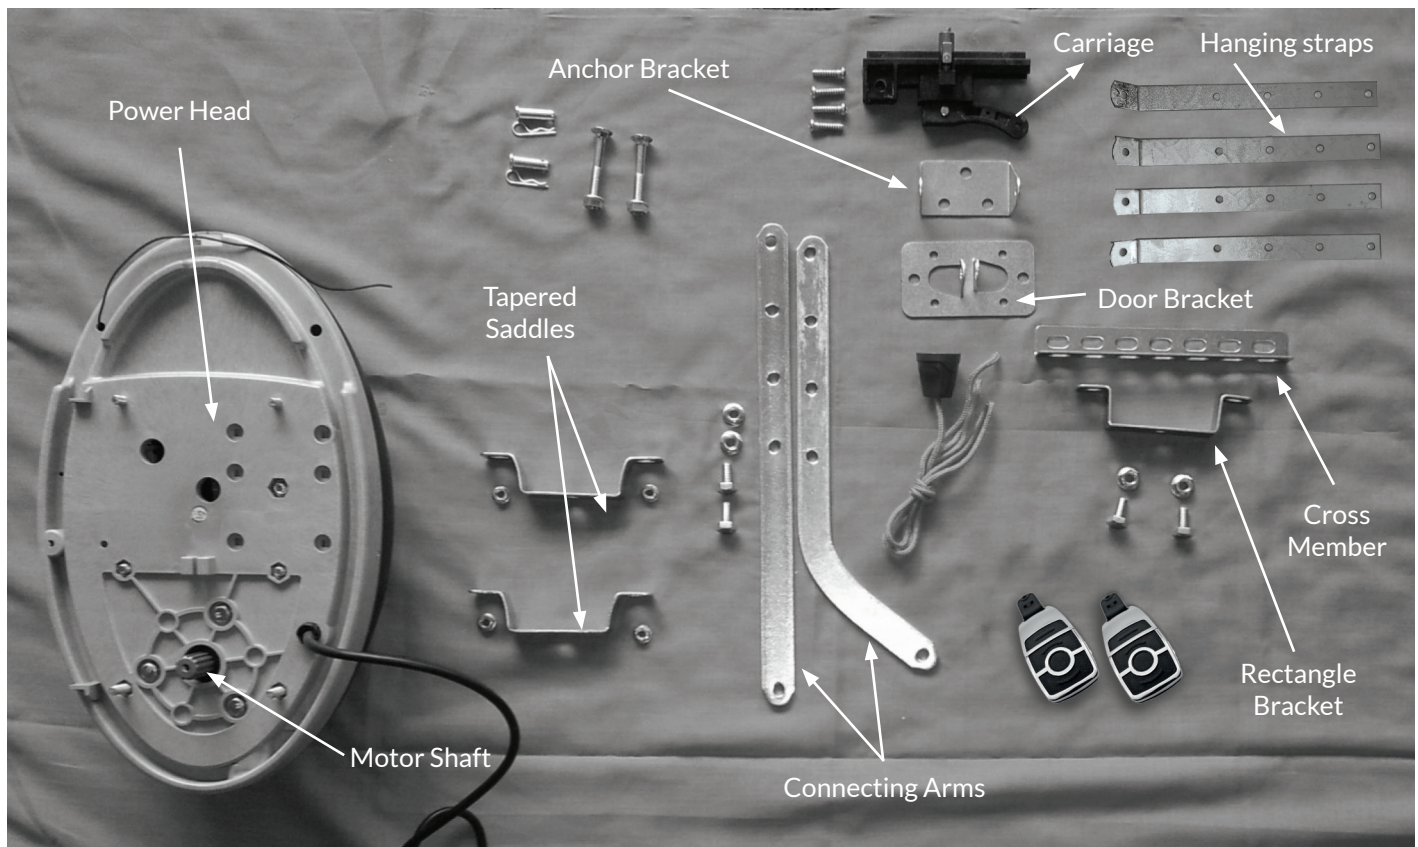

Door condition: For successful automation, a door should be in good working condition, i.e. it should be possible to open and close easily with one hand, be correctly sprung and run smoothly without sticking or binding. Torsion springs should be greased. Tracks should be well secured with correct clearances, and be clean and free of grime. Badly worn hinges, rollers and bushings should be repaired or replaced. Remove all unnecessary ropes, brackets, levers, etc.

Caution! Garage doors, door springs, cables, pulleys, brackets and hardware are under extreme force and can cause serious personal injury.

Note: Most complaints of unsatisfactory garage door operation can be traced to problems with the door itself. The Digi One is not intended to correct any problems that are caused by an unbalanced or binding door. When operated manually, a properly balanced door will remain stationary, at any point of its travel, while being supported entirely by its springs.

For optimum reliability and lifespan of your Digi One operator, have your garage door serviced regularly.

4. Installation

4.1 Recommended Tools and Equipment for This Installation

Electric drill

Impact, variable-speed,
with reversible drill bits

Masonry: 6mm, 10mm

Steel: 6mm, 10mm, 12mm

Hacksaw

Screwdriver – Ø 3mm

Screwdriver – ⊕ 6mm

Spirit level

Tape measure – 5m

Hammer

Spanners

Sockets: 8mm, 11mm, 13mm

Flat/ring: 10mm, 11mm,
13mm, 14mm

Stepladder – 1.7m ~ 2m high

Extension lead – to suit

4.2 Installing the Operator and Rail

With the release lever pointing away from the spring, fit the carriage to the base using four Phillips screws.

Attach the release cord to the release lever.

While engaging the motor shaft with the sprocket, place the rail on top of the power head.

Bolt the rectangular saddle to the cross member on the rail in the space at the front of the operator.

Secure the tapered saddles to the four studs with flange nuts.

Mount the anchor bracket to the front wall on the door centre-line.




Secure the foot of the rail to the anchor bracket.

Once the power head has been suspended, fit the connecting arms as shown, using the pins and 'R' clips.

Overlap the Arms and bolt them so that the short section is horizontal.

Using suitable material bolted to the cross member, secure the power head overhead, so that the rail is horizontal.

Plug the mains cord into a socket installed according to regulations.

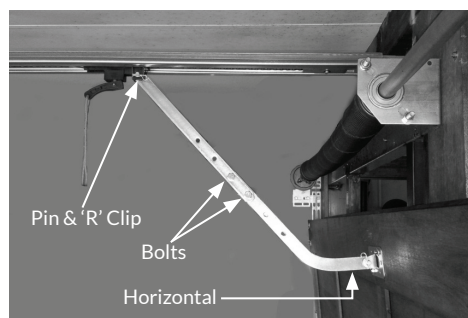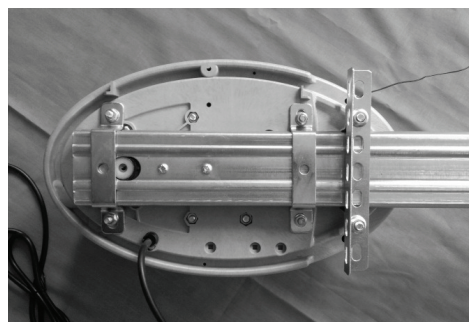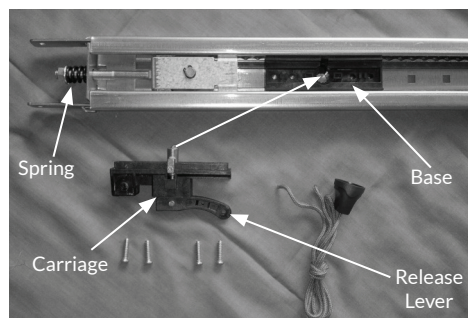

5. Electrical Terminals and Connections

Note: The terminals can be accessed by unclipping and removing the light lens.

Should the main cover need to be removed, remove the screws at the front and sides, and support the cover so that the hook at the rear is not stressed.

Push Button

If required, make the connections to the 'Push Button' and '-Common' terminals.


Safety Beam

If required, make these connections to the '+24V DC', '- Common' and 'Beam NC' terminals.

Back-up Battery (Optional)

Connect the positive wire to '+ (Red)', and the negative wire to '- (Black)'.

Note: To avoid serious damage, pay careful attention to the colours and polarity.

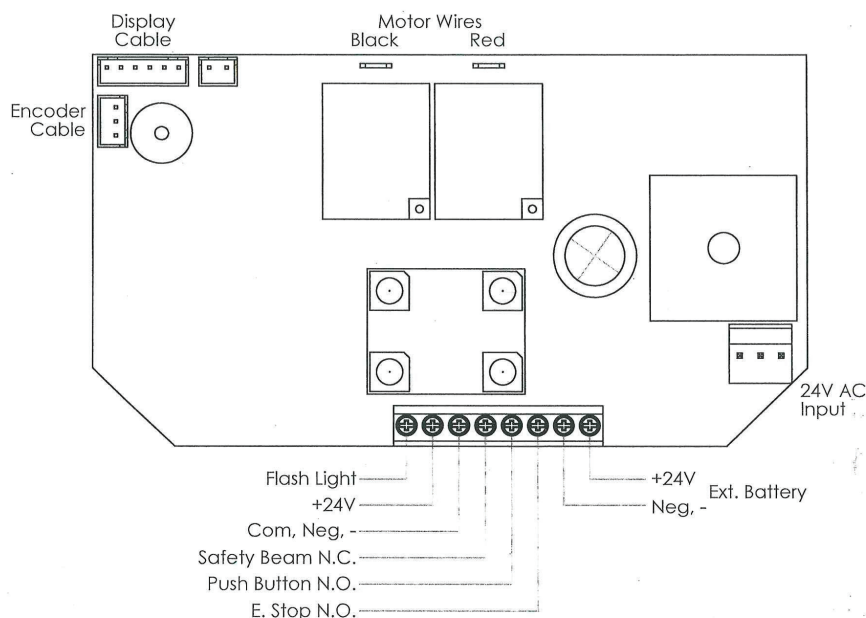

6. Control Panel



7. Programming the Operator

(Note: The operator will exit programming if left for 30 seconds.)

Preparation	
With the carriage release lever horizontal, move the door by hand until the carriage engages with the shuttle.	
Turn on the power; the Lamp comes on while the display runs from '99' to '11'.	99 11
The display changes to '--'. (Standby Mode)	--
Setting Open and Close Positions	
Press and hold the SET button, until 'P1' is displayed.	P1
Press SET again, 'OP' is displayed.	OP
Press and hold the UP button. While opening, 'OP' flashes.	OP
Release the UP button when the open position is reached.	
Use the UP or DOWN buttons to adjust the open position.	
Press SET , and 'CL' is displayed.	CL
Press and hold the DOWN button. While closing, 'CL' flashes.	CL
Use the UP or DOWN buttons to adjust the closed position.	
Press SET , and the door will open and close automatically to establish normal force requirements. Finally '--' is displayed.	OP CL --
Adding eKey Remotes.	
Press the CODE button. 'Su' is displayed.	SU
Choose and press a button on the eKey remote.	SU
Press the same button again to confirm. 'SU' flashes and then '--' is displayed.	{SU} --
Repeat the above steps for additional eKey remotes. A maximum of 20 may be stored. An attempt to add another will display 'Fu'.	FU
Deleting Remotes	
Caution: This function deletes all remotes	
Press and hold the CODE button for 8 seconds. 'dL' is displayed.	dL

(Programming cont.)

Operating Force Adjustment	
Press and hold the SET button, until 'P1' is displayed.	P1
Press the UP button once. 'P2' is displayed.	P2
Press SET again. The current force setting is displayed. Press UP or DOWN to increase or decrease this value by one step at a time. Maximum is 'F9'; minimum is 'F1'. Press SET to confirm.	F9 F1
Default setting is 'F5'	F5
Safety Beam – Enabling and Disabling	
Press and hold the SET button, until 'P1' is displayed.	P1
Press the UP button twice. 'P3' is displayed.	P3
Press the SET button to show the beam status. 'H0' means disabled, 'H1' means enabled.	H0 H1
Press the UP button to enable. 'H1' is displayed.	H1
Press the DOWN button to disable. 'H0' is displayed.	H0
Press the SET button to confirm and exit. NOTE: If safety beams are not fitted, ensure the above function is disabled, or the operator will open, but will not close.	H0
Auto-close	
Press and hold the SET button, until 'P1' is displayed.	P1
Press the UP button three times. 'P4' is displayed.	P4
Press the SET button to show the auto-close status. 'b0' means 'No Auto-close', 'b9' is maximum auto-close.	b0 b9
Press the UP button to increase, or the DOWN button to decrease the delay by 1 minute.	
Press the SET button to confirm and exit.	

8. Owner's Guide

Notes and warnings: Only operate the door when it is in full view. Do not allow young children to play with the controls. Keep people, pets and property clear of the moving door. The door operator is intended for indoor installation. The door and operator should be serviced annually.

Troubleshooting		
In the event of a malfunction, to judge where the fault may lie, use the manual override and test the door by hand, and check if the operator will function with the door disengaged.		
Problem	Possible Cause	Remedy
Noisy chain	Chain has become loose	Adjust the M8 nut on the spring
No response from the motor	Mains supply/loose plug, blown fuse	Check the mains. Check/replace the fuse with the same type
Door opens but will not close	Safety beam (if fitted) is faulty	Test by disabling the beam (see Programming)
The motor works from the push button, but not the remote	Remote faulty or battery low	Replace remote battery. If two or more remotes fail, replace the control board.
Remote range is short	Remote battery low	Replace remote battery
Door fails to close fully and re-opens, or door fails to open fully	Operating force too low	Test the door by hand. Slightly increase the operating force (see Programming)


9. Battery Back-up (Optional)

Insert one of the accompanied bolts into the centre hole, at the back of the battery-pack.

Fix the battery-pack to the hanging strap's second hole, as shown in the picture.

With the battery-pack fastened, connect the battery-pack to the power head by pushing the Molex connectors into each other, until it locks.

Note: The battery-pack will sit at an angle on the hanging strap.

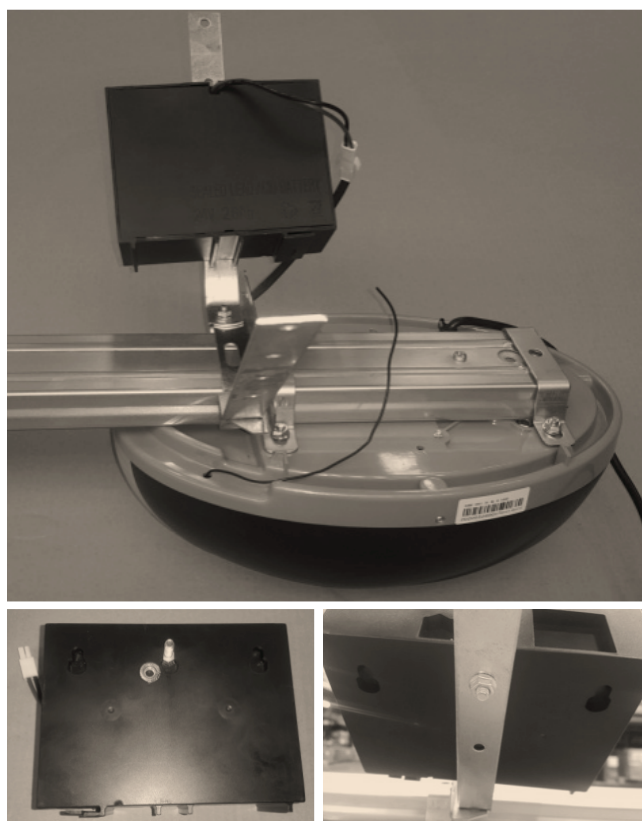

Manufacturer's Warranty

- Hydro Doors and Gates (Pty) Ltd (Hydro) warrants the first purchaser of the Digi One, that the product shall be free of any defects in materials and/or workmanship for a period of 12 months (one year) from the verifiable date of purchase. Such verification shall include a valid proof of purchase by the first retail purchaser, which shall include, if possible, the serial number of the motor under warranty. Upon receipt of the product, the first purchaser is under obligation to check the product for any visible defects.
- This warranty is applicable to the product if sold and installed in the Republic of South Africa.
- If the product is sold and installed outside the Republic of South Africa, the obligations for repairing this product under warranty will be borne by the distributor of the product in the territory concerned. The terms and conditions of warranties in a territory outside the Republic of South Africa will be available from the distributor in that territory.

CONDITIONS: The warranty shall constitute the sole remedy available under law to the first retail purchaser for any damages related to, or resulting from, a defective part and/or product. The warranty is strictly limited to the repair or replacement of the parts of this product, that are found to be defective.

The warranty does not cover:

- Non-defect damage caused by unreasonable use (including use not in complete accordance with this Digi One installation/owner's manual).
- Labour charges for removal or re-installation of a repaired or replaced unit.
- Transport costs incurred in getting the product to Hydro; Hydro will quote for in-situ warranty repairs if requested.
- Damage to the product caused by lightning, power surges or incorrect installation.
- The product if used to automate more than one door at a time .
- The product if installed outdoors, including carports.
- The product if installed in excessive traffic applications, for example, apartment blocks or parking garages.
- Any unauthorised, non-Hydro modification to the product or the components thereof; any modification that may be required, must be authorised in writing.
- Consequential or incidental damage to property or person.
- Batteries installed in the operator, remote controls or wall console.

Hydro will repair, or at its discretion, replace, any device that is determined to be defective in materials and/or workmanship, at no cost to the owner for the repair and/or replacement part. Defective parts will be repaired or replaced with new or factory-rebuilt parts at Hydro's discretion. Warranty repairs shall be effected, provided the product is returned to Hydro at the owner's expense. No representative or person is authorised to assume for Hydro any other liability in connection with the sale of this product. For warranty, service or shipping instructions, please contact Hydro. All items must be sent to Hydro Doors for service at the owner's expense.

Sales Branches	
Branch	Tel
Honeydew	+27 11 801 3800
Boksburg	+27 11 397 8448
Midrand	+27 12 653 6399
Nelspruit	+27 13 753 2176
Cape Town	+27 21 933 5556
Durban	+27 31 700 2110
Port Elizabeth	+27 41 367 2874



Tell: +27 (0) 861 10 24 25

Email: customerservice@sbsbuilding.co.za

www.hydrodoors.co.za